



Published on *Documentation* (<https://www.emetrotel.com/tsd>)

[Home](#) > BCM Feature Codes supported by UCx

BCM Feature Codes supported by UCx

BCM Feature Code	Feature Description
F0	System Speed Dial
F*0	Button Inquiry
F*1	Autodial - External
F*2	Autodial - Internal with BLF (Nortel extensions only)
F*3	Memory Buttons - Programming
F3	Conference
F4	Call Forward
F#4	Call Forward - Cancel
F5	Last Number Redial
F*501	Language - Primary (US-English)
F*502	Language - Alternate 1 (CDN-French)
F*503	Language - Alternate 2 (Spanish)
F*504	Language - Alternate 3 (default configured language)
F*510	Time Zone Offset (IP phones only)
F*6	Ring Type
F60	Page General
F611 - F616	Page Internal Zone 1 - 6
F66	Voice Call
F*7	Display Contrast Adjustment
F70	Transfer (Attended)
F#70	Transfer - Cancel
F71	Link / Hook Flash (limited to internal analog trunks)
F74	Call Park

BCM Feature Code	Feature Description
F75	Group Pickup
F76	Directed Pickup
F77	Call Timer
F*80	Ring Volume
F85	Do Not Disturb
F#85	Do Not Disturb - Cancel
F803	Time (Speaking Clock)
F805	Test Sets
F806	Static Time and Date
F#806	Static Time and Date - Cancel
F811	Caller ID Info (Caller ID / Caller Name toggle for single line display phones) - Toggled state is kept for subsequent calls.
F812	Call Log - View Information (NOT supported on phones that have single line display screens and do not have soft keys.)
F819	Caller ID Blocking
F#819	Caller ID Blocking - Cancel
F9*9	Logger Time Stamp
F901	Agent Login (login / logout toggle)
F902	Agent Unavailable (not ready / ready toggle)
F960	Directory Service (dial by name)
F970	Transfer (Blind)
F980	Leave Message via text prompts
F981	Voice Mail Login
F984	Call Forward To Voice Mail (F#4 Cancel Call Forward To Voice Mail)
F985	Display Voice Mail DN
F986	Transfer To Mail Box
F989	Record Call
F*999	Hot Desking
F#*999	Hot Desking - Cancel